


CEM26/GEM28 MiniPier (#8040 and #8040-8) Installation

CEM26/GEM28 MiniPier comes with two versions: #8040 extends 5" in height and #8040-8 8".

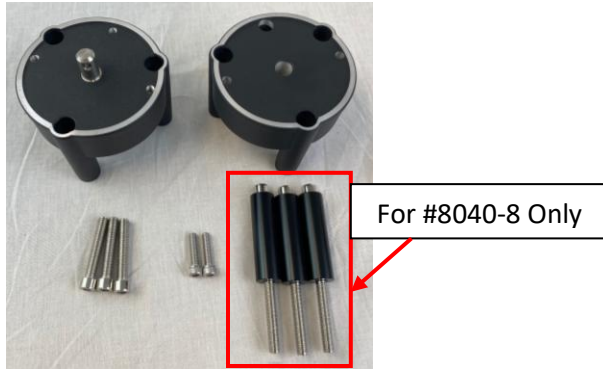

Step 1: Remove alignment peg from the CEM26/GEM26 tripod top



Step 2: Add the bottom half of extension onto the tripod top. Insert two M6 screws to secure the bottom half on to the tripod top.



Step 3: Add the top half onto the bottom part and secure it using three longer screws. If you need more height (for #8040-8), put three extension tubes between the top and bottom tubes and use included long crews to secure them.

Step 4: Install the alignment peg. If the alignment peg direction is opposite to what you expected, rotate the bottom half 180 degree.

